


Fixing Instructions

Caution! - Product has sharp edges! Wear gloves when handling.

Quelfire QWR CE Marked Fire Collars are life saving products designed to prevent the spread of fire where plastic pipes penetrate fire compartment walls or floors. It is therefore essential that they are fitted in a responsible and workmanlike manner.

Quelfire QWR CE Marked Fire Collars should be used where a plastic pipe penetrates a fire rated wall or floor. For vertical pipework, one unit should be installed to the underside of the floor. The soffit of the floor or the face of the wall must be smooth and where there are irregularities in the surface, the space between the flange of the unit and floor or the wall should be made good using Quelfire GM Intumescent Acoustic Acrylic Sealant.


The Quelfire QWR CE Marked Fire Collar should be fed around the plastic pipe, securing the ends together by passing the tongues on one end through the slots on the other end. The tongues should then be bent back and the unit secured to the structure using the integral fixing lugs.

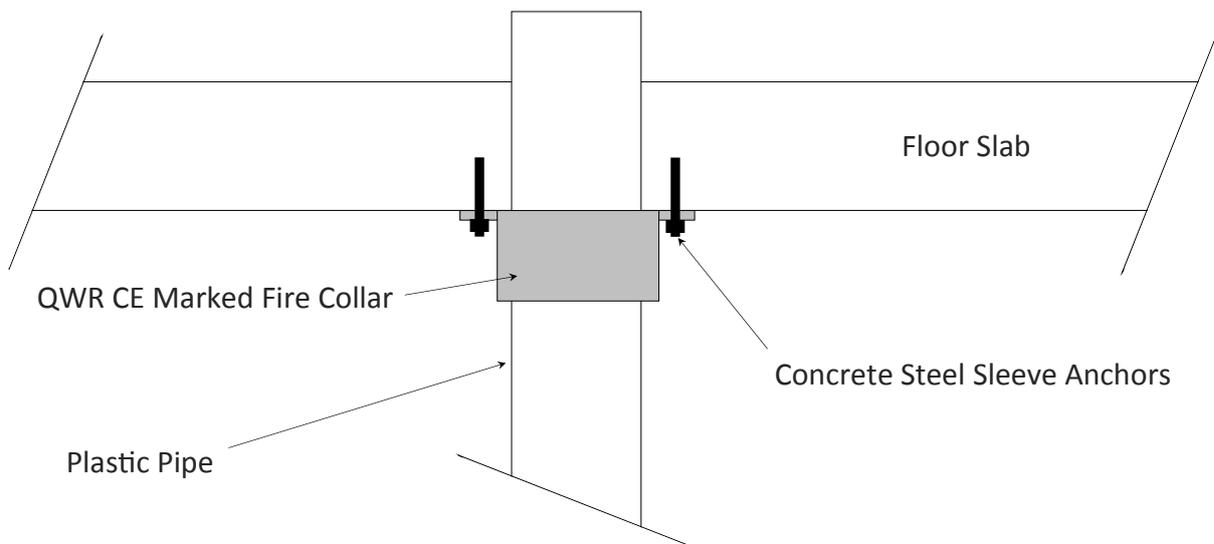

The QWR CE Marked Fire Collar must be secured to concrete and masonry construction using steel sleeve anchors.

Quelfire QWR CE Marked Fire Collars can also be installed in conjunction with the Quelfire SS System. Please refer to Quelfire Technical department for details.

Fixing Instructions

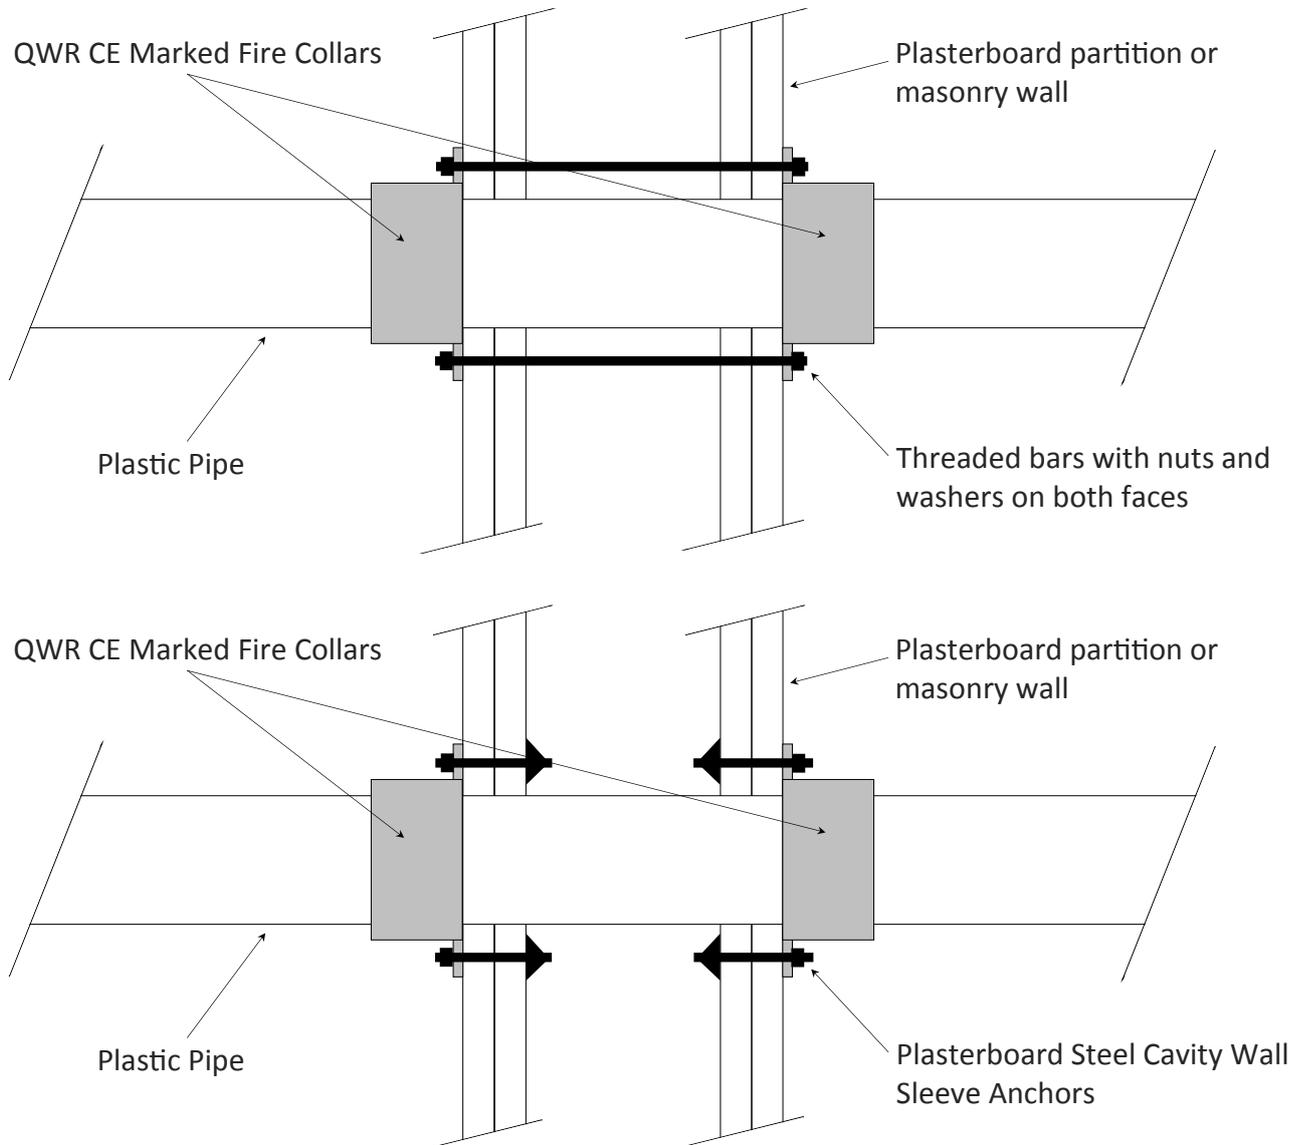

For horizontal pipework one unit should be fitted to each side of the wall.

Where fitting to a plasterboard partition wall one QWR CE Marked Fire Collar should be installed on either side of the partition and fixed using through-bolts with nuts and washers, or secured to each side of the partition using plasterboard steel cavity wall sleeve anchors.

